
BORING INSTRUCTIONS

ADJUST-A-BODY® TENSIONER WITH THREADED BOLT

Drill and tap holes as indicated below:



ADJUST-A-BODY® TENSIONER WITH THREADED EYE

If part is being mounted using an Invisiware® Fixed Tab or Threaded Tab, see boring instructions for those parts.

If part is being mounted to a structural tee, angle iron or steel plate, drill holes as indicated below:


Part No.	Used with Cable Dia.	Hole Dia.	Max Dimension from Front Edge of Mounting Surface to Hole Center	
A-JTE6	1/8" 3/16"	5/16" (.313")	3/8" (.375")	
A-JTE8	1/4"	7/16" (.438")	1/2" (.500")	

ADJUST-A-JAW® TENSIONER AND ULTRA-TEC® FIXED JAW

If part is being mounted using an Invisiware® Fixed Tab or Threaded Tab, see boring instructions for those parts.

If part is being mounted to a structural tee, angle iron or steel plate, drill holes as indicated below:

Part No.	Used with Cable Dia.	Hole Dia.	Max Dimension from Front Edge of Mounting Surface to Hole Center	A Jaw Opening
A-J62	1/8" 3/16"	5/16" (.313")	3/8" (.375")	.260"
A-J82	1/4"	7/101/40011	1/2" (.500")	.390"
A-J122	5/16" 3/8"	7/16" (.438")	9/16" (.563")	

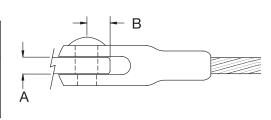

3/1/12





